
2. Parts and descriptions of Main Unit

1. Product features:

- \odot Power supply of AC90-240V at 50/60Hz.
- \odot High-efficiency microprocessor, with more flexible and user-friendly functions.
- \odot Regulated power supply for low power consumption and over heating.
- Overload protective circuit and load indicator incorporated to enable safe and continuous usage.

Specification:

Power supply	AC90-240V 50/60Hz
Max. power consumption	60 Watts
Ultrasonic frequency range	18-26 KHz
Adjustment of Ultrasonic output	Continuous
Ultrasonic amplitude	3-40µM
Method of frequency adjustment	Auto-tracing
Suspension detection & protective circuit	Yes
Overload protection circuit	Yes
Load indicator	5 level led lamps
Fuse	2A 20mm time-lag type
Dimensions	W170xD226xH140 mm
Weight	2.0 Kg

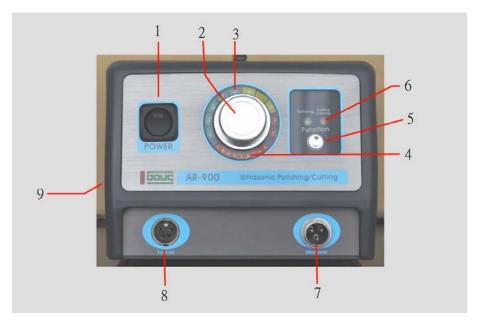

- 1. Power switch and indicator lamp
- 2. Output power adjusting knob.
- 3. Output setting level indicator.
- 4. Load indicator.
 - Green LED Normal usage
 - Yellow LED Heavy load.
 - Red LED Overloading
- 5. Function setting knob(For select out mode on polishing or cutting).
- 6. Function indicator
- 7. Ultrasonic hand-piece socket.
- 8. Foot switch socket.
- 9. Power input socket (at the rear): including 20mm fuse holder.

3. Usage

3-1 Ultrasonic lapping tools

- 1) Please confirm the voltage before connecting the power supply.
- 2) Install a correct holder or tool on to the Ultrasonic handpiece. (Please use the tool changing rack to avoid damage.)
- 3) Insert the hand-piece plug into the socket on both handset and main unit.
- 4) Turn on the power switch The power indicator lamp will light up, push button output speed indicator lamp will blink, which shows it is tracing the correct frequency. In about 3 seconds, the output speed indicator lamp will stop blinking and indicate min. level, and it is now ready to use.
- 5) Push function selection knob to select polishing output function mode.
- 6) Adjust the output power.

During usage, the output power can be adjusted by turning the Output speed and power adjusting knob.

- 7) Tools and clamp horns must be securely fastened; otherwise full power will not be utilized. And the power pack cannot adjust to the correct frequency.
- 8) If the tool is not securely fastened and/or the clamp horn fully clamped a high pitched noise will be emitted. Please secure all joints. If the noise persists replace the tool clamp horn, switch power off and restart to activate the automatic frequency adjustment.

3-2 Foot switch

[ON/OFF-type foot switch]

- 1) This switch can be plugged in any time during use, when using the foot switch, keep depressing it to produce output.
- 2) The output (speed) indicator lamp blink after the foot switch is connected, but will light up at the level set by the knob after the foot switch is depressed.

3-3 Other notices

- 1) It is necessary to turn off the power before changing lapping and polishing tools each time.
- 2) Use only correct tools (Ultrasonic tool changing rack and wrenches) when changing tools to avoid damage.
- 3) On the ultrasonic function please switch the Power off & on to allow the unit to adjust to the correct frequency.
- 4) Insure your Leutor-Sonic equipment is protected from impact; moisture or corrosive materials.

4. AR-900 Accessories

4.1 Standard contents.

No.	Item	Article-No	Specification	Q/T
1	Small Hand-piece		Φ26mm×116mm 36 Watts	1
2	Hand-piece base		L112xD51xH35 mm	1
3	Plug/Power cord		18AWGx3C 180 cm	1
4	Small Hand-piece cord	31-PSAK	150 cm	1
5	Wrench		10mm/12mm	2
6	Hex wrench		2.5mm	1
7	Spare fuse		3A time-lag type	1
8	Tool holder A. T 1.1mm	31-PSW1	T 1.1mm M6	1
	M6		For ceramic oilstones	
9	Tool holder B. Φ 3.0mm	31-PSW2	Φ3.0mm M6	1
	M6		For φ 3 shank	
10	Tool holder C. T 3.1mm	31-PSW3	T 3.1mm M6	1
	M6		For oilstones	
11	Foot switch (ON/OFF		Cord length:190cm	1
	function)		Dimension:	
			L73xD103xH33 mm	

4.2 AR-900 Optional Accessories

No.	Item	Article-No	Specification	Q/T
1	Large Hand-piece		φ33x147 mm 45Watts	
2	Large Hand-piece cord		150 cm	
3	Tool changing rack of		For W:12mm	
	Large hand-piece			
4	Large Tool holder A.		T 1.1mm M8	
	T 1.1mm M8		For ceramic oilstones	
5	Large Tool holder B.		Φ3.0mm M8	
	Ф3.0mm M8		For φ 3 shank	
6	Large Tool holder C. T		T 3.1mm M8	
	3.1mm M8		For oilstones	
7	Power cord		18AWGx3C 180 cm	
8	M6/M4 Adaptor			

The specifications and models contained in this manual are subject to actual delivery. Changes and modifications, if any, will not be further noticed.